


# Maxlok® 1921



For installation information please refer to the tooling overview and manuals on our website [www.avdel-global.com](http://www.avdel-global.com).  
 Pour les conditions de pose, merci de vous référer à la description de l'outil et aux manuels disponibles sur notre site Web.  
 Angaben zur Verarbeitung entnehmen Sie bitte der Geräteübersicht und den Betriebsanleitungen auf unserer Website.  
 Per informazioni sull'installazione preghiamo consultare i manuali e la panoramica degli attrezzi sul nostro sito web.  
 Para ver información sobre máquinas de colocación, consulte nuestra página web, apartados visión general de máquinas y manuales.

English	Français	Deutsch	Italiano	Español
Brazier head	Tête plate	Flachrundkopf	Testa tonda	Cabeza alomada
Pin: Aluminium alloy* Polished	Tige: Alliage d'aluminium* Poli	Bolzen: Aluminium* Poliert	Bullone: Lega di alluminio* Lucido	Vástago: Aluminio* Pulido
Collar: Aluminium alloy* Natural	Bague: Alliage d'aluminium* Brut	Schließring: Aluminium* Blank	Collare: Lega di alluminio* Nessuna finitura	Collar: Aluminio* Natural

\*: EN AW-7075, AlZn5.5MgCu    \*\*: EN AW-6061, AlMg1SiCu

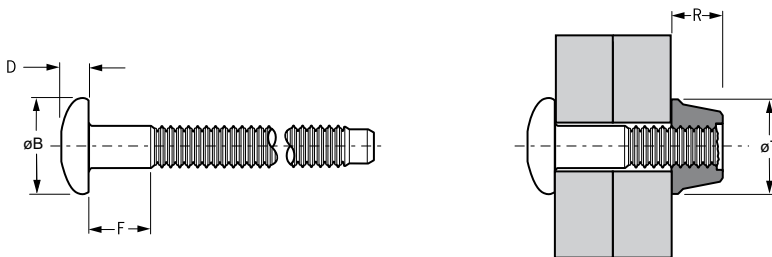

ø	[Cross-section diagram]		[Thread diagram]	øB	D	F	R	øT	[Pin strength diagram]	[Collar strength diagram]	Part No/ref	Part No/ref
	min.	max.										
3/16" 4.8 mm	.062	.625	.203	.394	.133	.090	.313	.390	950	1300	01921-00610	01985-00600
	.312	1.250				.330					01921-00620	
1/4" 6.4 mm	.062	.625	.265	.525	.162	.085	.438	.510	1675	2200	01921-00810	01985-00800
	.312	1.250				.360					01921-00820	

all dimensions in inches / en pouces / alle Maße in Zoll / in pollici / en pulgadas

1) typical values / valeurs moyennes / typische Werte / Valori tipici / resistencias máximas recomendadas